


how to use  
and enjoy your

# sewing machine

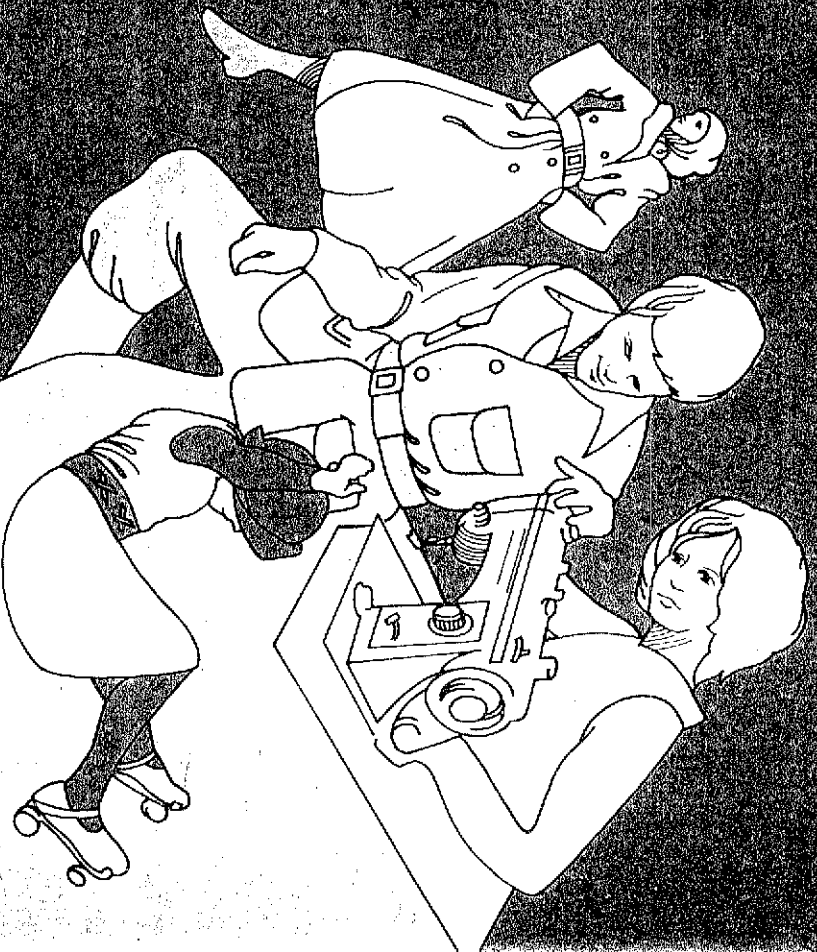

MODEL VX540  
ENGLISH  
191540-0-51  
PRINTED IN TAIWAN

# CONTENTS


<b>1. Knowing Your Sewing Machine</b>	<b>2</b>
PRINCIPAL PARTS . . . . .	2
ACCESSORIES . . . . .	4
OPERATING YOUR SEWING MACHINE . . . . .	5
Connecting plugs . . . . .	5
Controlling sewing speed . . . . .	5
VARIOUS CONTROLS . . . . .	6
Pattern dial . . . . .	6
Stitch length dial . . . . .	6
Stitch width dial . . . . .	7
Reverse sewing lever . . . . .	7
Height of feed dog . . . . .	7
PRESSER FOOT . . . . .	8
NEEDLE . . . . .	8
How to change the needle . . . . .	8
How to check the needle . . . . .	8
Twin needle . . . . .	9
Golden stretch stitch needle . . . . .	9
NEEDLE PLATE . . . . .	10
RELATIVE CHART OF SEWING MATERIAL, NEEDLE AND THREAD . . . . .	10
SEW-LIGHT . . . . .	11
Sew-light switch knob . . . . .	11
How to change the bulb . . . . .	11
EXTENSION TABLE . . . . .	11
UPPER (NEEDLE) THREAD . . . . .	12
LOWER (BOBBIN) THREAD . . . . .	13
How to wind bobbin . . . . .	13
How to remove and insert bobbin case . . . . .	14
How to thread bobbin case . . . . .	14
How to pull up lower thread . . . . .	15
THREAD TENSION . . . . .	16
Upper thread tension . . . . .	16
Lower thread tension . . . . .	16
<b>2. Straight Stitching</b>	<b>18</b>
How to start sewing . . . . .	18
How to change sewing direction . . . . .	18
How to finish your sewing project . . . . .	19
How to remove final sewing from machine . . . . .	19
How to sew very thin material . . . . .	19
How to guide your material . . . . .	19
<b>3. Zigzag Stitching</b>	<b>20</b>
Simple zigzag stitch . . . . .	20
Satin stitch . . . . .	20
<b>4. Decorative Stitches</b>	<b>21</b>
<b>5. Built-in Stitches</b>	<b>22</b>
Blind stitch . . . . .	22
Shell stitch . . . . .	23
Triple stretch stitch . . . . .	23
<b>6. Buttonholes and Button Sewing</b>	<b>24</b>
Buttonholes . . . . .	24
Button sewing . . . . .	26
<b>7. Attachments</b>	<b>27</b>
Narrow hemming . . . . .	27
Zipper insertion . . . . .	28
Darning . . . . .	29
Cloth guide . . . . .	29
<b>8. Various Other Stitches</b>	<b>30</b>
Gathering . . . . .	30
Attaching lace . . . . .	30
Appliquing . . . . .	31
Cording . . . . .	31
Monogramming and embroidering . . . . .	32
<b>9. Maintenance and Care of Your Machine</b>	<b>33</b>
Cleaning . . . . .	33
How to oil sewing machine . . . . .	34
Check list for better sewing . . . . .	36
Repacking the machine . . . . .	37

**CAUTION**


WHEN CHANGING NEEDLE, BOBBIN OR LIGHT BULB, OR WHEN SEWING MACHINE IS NOT IN USE, IT IS RECOMMENDED THAT ELECTRICAL SUPPLY PLUG IS DISCONNECTED TO AVOID ELECTRICAL HAZARDS.

# I Knowing Your Sewing Machine

## Principal Parts

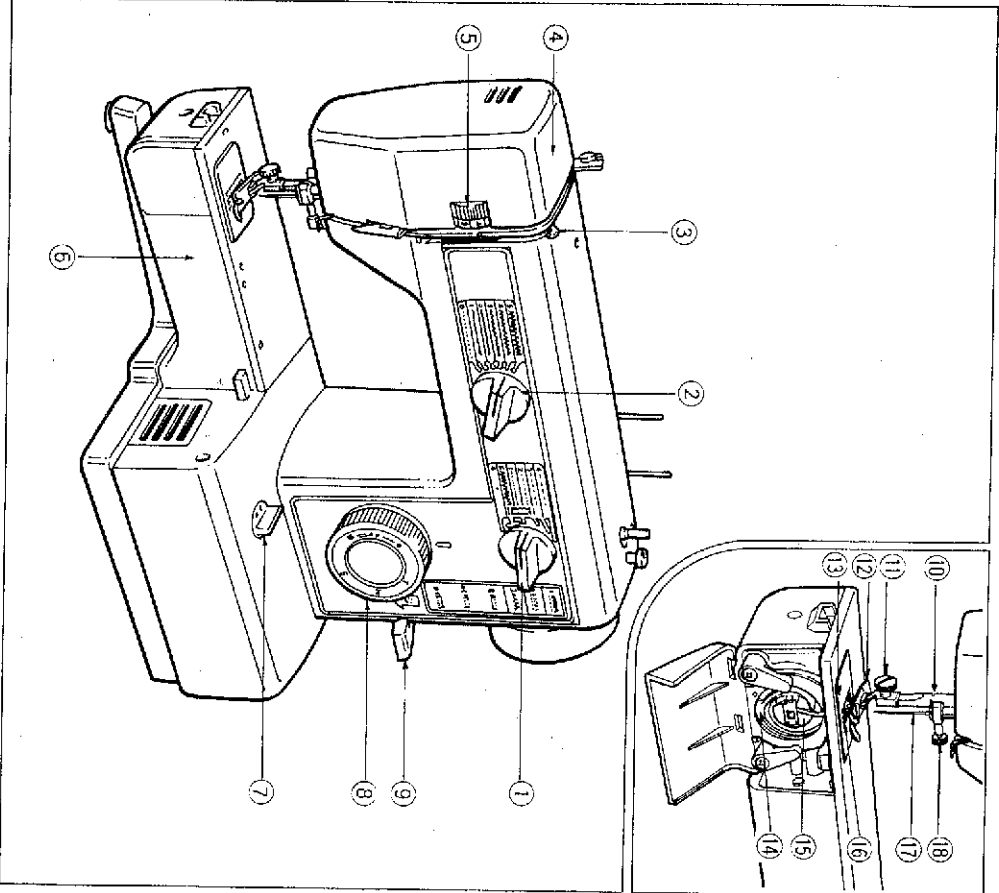


- 1. Stitch Length Dial
- 2. Stitch Width Dial
- 3. Thread Take-up Lever
- 4. Face Plate
- 5. Upper Thread Tension Dial
- 6. Free Arm
- 7. Feed Dog Button
- 8. Pattern Dial
- 9. Reverse Sewing Lever
- 10. Thread Cutter
- 11. Presser Foot Screw
- 12. Presser Foot (Zigzag)
- 13. Needle Plate (Zigzag)
- 14. Shuttle Hook
- 15. Bobbin Case
- 16. Feed Dog
- 17. Needle
- 18. Needle Clamp Screw

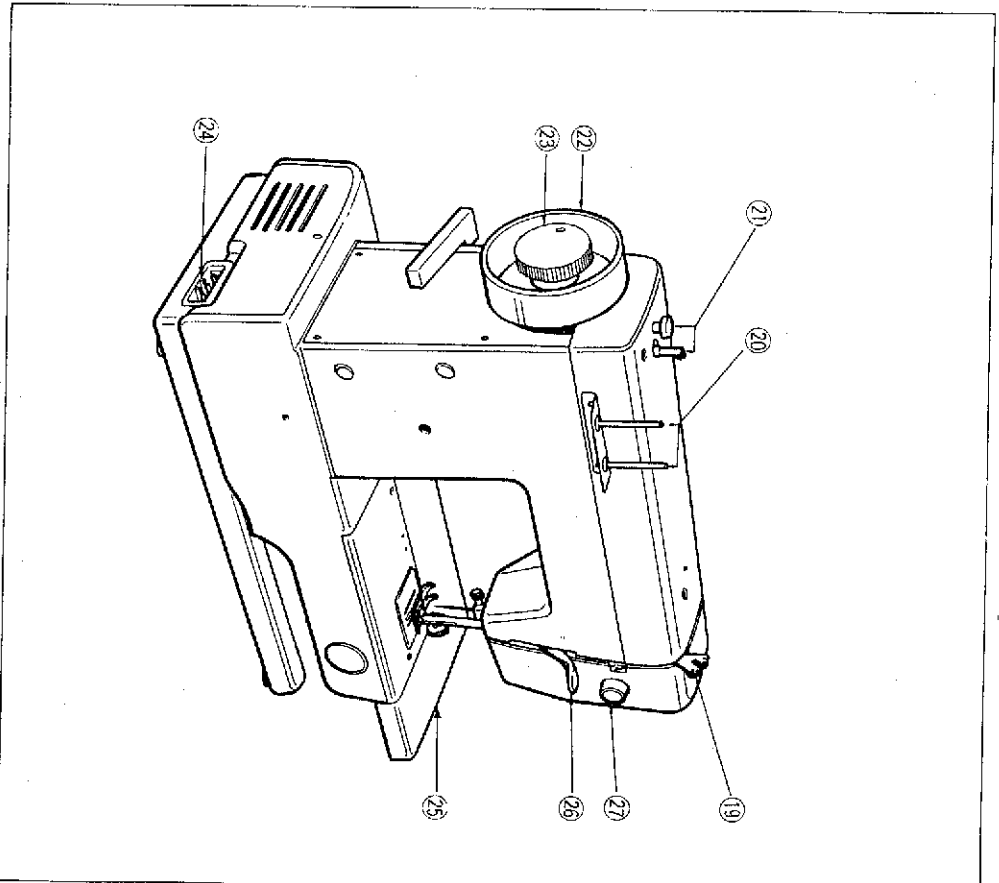

- 19. Thread Guide and Bobbin Winder Disc
- 20. Spool Pins
- 21. Bobbin Winder Device
- 22. Balance Wheel
- 23. Stop Motion Knob
- 24. 3-prong Socket
- 25. Extension Table
- 26. Presser Foot Lifter
- 27. Sew-light Switch Knob (Button)

## Accessories

The following accessories are provided with your sewing machine. These accessories are designed to help you sew easily and perfectly. For more details, see each page listed.

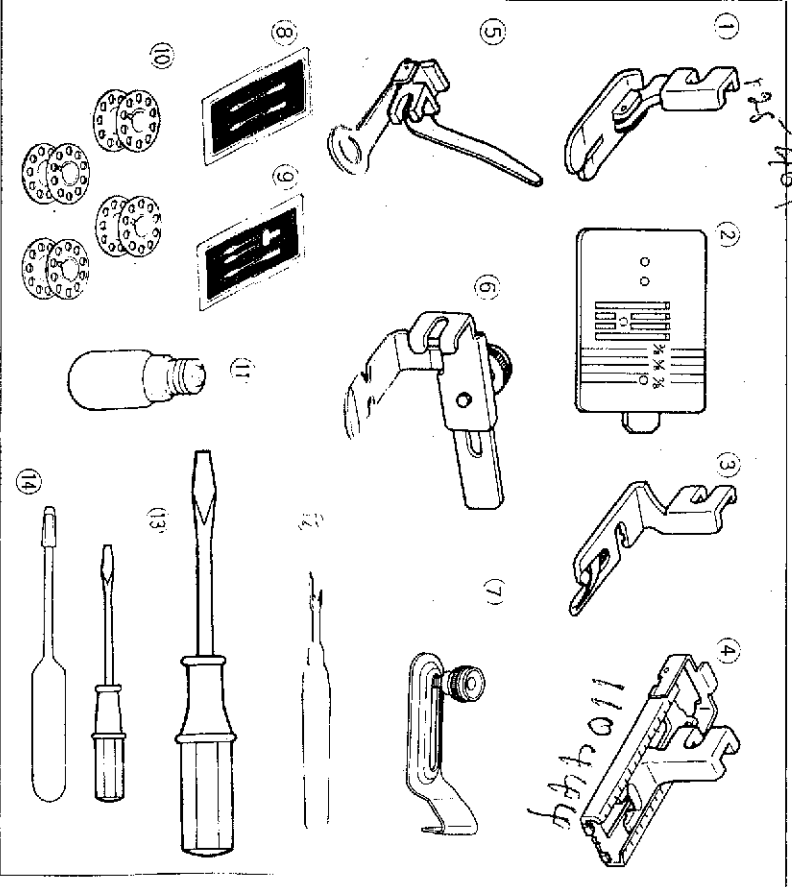


- |                                    |        |          |
|------------------------------------|--------|----------|
| 1. Straight Stitch Foot            | 1 pce. | See page |
| 2. Narrow-hammer Foot              | 1 pce. | 18       |
| 4. Burtonhole & Burton Sewing Foot | 1 pce. | 27       |
| 5. Darning Foot                    | 1 pce. | 24 & 26  |
| 6. Zipper Foot                     | 1 pce. | 29       |
| 7. Cloth Guide with Screw          | 1 pce. | 28       |
| 8. Needle Pack (A)                 | 1 set  | 29       |
| 8. Needle Pack (B)                 | 1 set  | 8        |
| 9. Needle Pack (A)                 | 3 pcs. |          |
| 9. Needle Pack (B)                 | 1 set  | 9        |
| Golden Stretch Stitch Needle       | 1 pce. |          |
| 10. Bobbins                        | 4 pcs. | 13       |
| 11. Saw-light Bulb                 | 1 pce. | 11       |
| 12. Seam Ripper                    | 1 pce. | 25       |
| 13. Screw Driver (Large & Small)   | 2 pcs. | .....    |
| 14. Oiler                          | 1 pce. | 34       |

The above illustrated accessories are provided with this machine.

## Operating Your Sewing Machine

### CONNECTING PLUGS

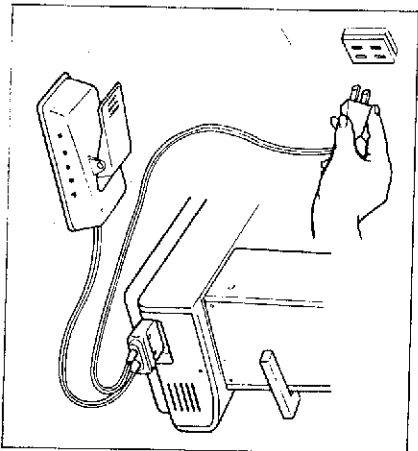


1. First connect the three-prong plug into the machine.
2. Then connect the electric supply plug into a wall outlet.

#### Caution

When changing needle, bobbin or light bulb, or when sewing machine is not in use, it is recommended that electrical supply plug is disconnected to avoid electrical hazards.

### CONTROLLING SEWING SPEED

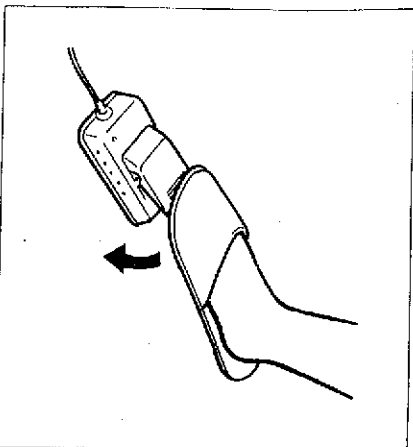


Place foot on foot control as shown in illustration.  
When foot control is pushed down lightly, machine will run at a low speed.  
When pressure on foot control is increased, machine will pick up speed.  
When foot control is released, machine will stop.

#### NOTE:

1. Care should be taken that nothing is placed on foot control when machine is not in use.
2. A new sewing machine or one that has not been in use for a long period of time should be oiled as per instruction on pages 34 and 35. After oiling be sure to wipe up any excess oil.

## Various Controls

### PATTERN DIAL

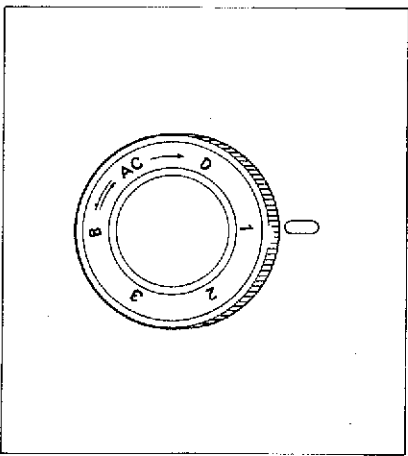


Your built-in pattern sewing machine enables you to obtain perfect buttonholes, triple stretch stitch and blind stitch by simply selecting the pattern on this dial.

1. Raise needle to its highest position.
2. Simply turn the dial and set the pattern you desire at the setting point.

#### NUMBERS AND STITCHES OF PATTERN

1. General Zigzag Stitch and Straight Stitch
2. Triple Stretch Stitch
3. Blind Stitch
- A. B. C. D. Automatic Buttonhole

### STITCH LENGTH DIAL

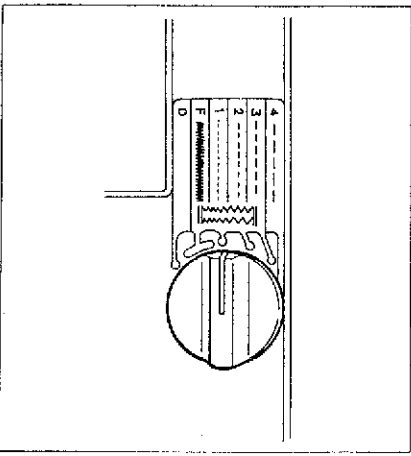

The stitch length is regulated by turning the stitch length dial.


Numerals beside the dial represent the stitch length. **THE HIGHER THE NUMBER, THE LONGER THE STITCH.**

The "0" means that the material is not fed.

The "F" area is used for making a **SATIN STITCH** (a close zigzag stitch) and this stitch is used for making decorative patterns.

The dial position needed to obtain the satin stitch is varied according to the material and thread being used. To determine exact dial position, you must observe the feeding of the material.

### STITCH WIDTH DIAL

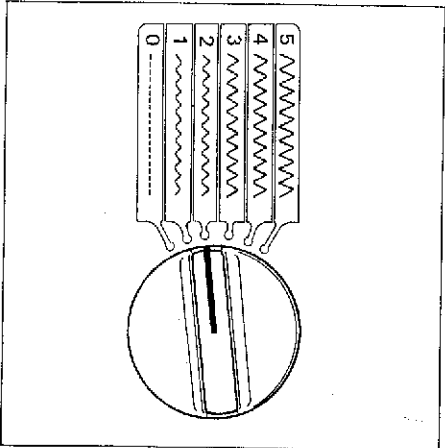


The zigzag width is regulated by operating the stitch width dial.

Numerals beside the dial represent the width of stitch. **THE HIGHER THE NUMBER, THE WIDER THE STITCH.**

The "0" means straight stitch only.

- NOTE:**
1. Do not move the dial while the needle is in the material.
  2. When using twin needle, dial should always be set at under "3".

### REVERSE SEWING LEVER

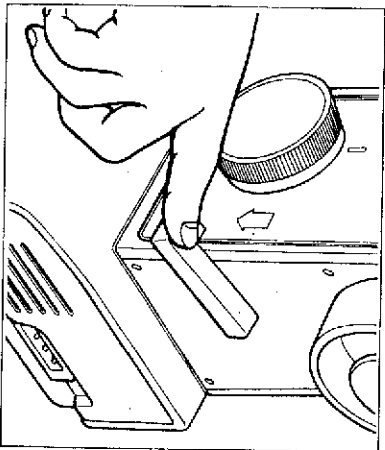


To sew in reverse, depress sewing lever in direction of **Rarrow** as far as it will allow. Hold lever in this position until you wish to sew forward. When lever is released it will spring back in position and you will sew in forward direction.

Reverse sewing is used for back-tacking and reinforcement.


### HEIGHT OF FEED DOG

According to diagram below, regulate height of feed dog by using drop feed button.

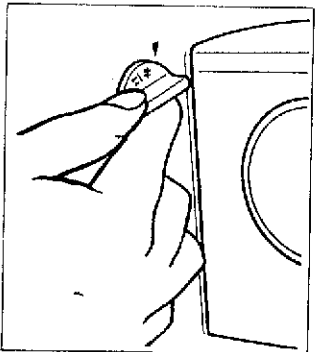

Drop feed	Height of feed dog	Sewing purpose
Down ▲▲	(No feeding!)	Button sewing Darning, Mending, Embroidering, Monogramming
Up ▲▲	(Feeding)	General sewing

## Presser Foot

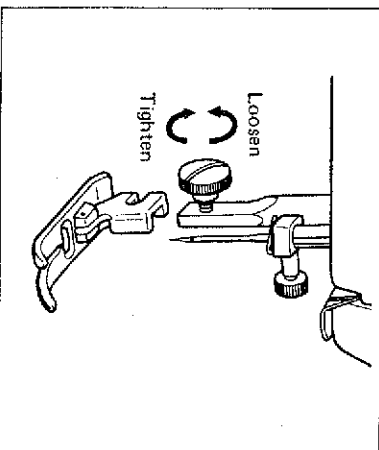


You will find various kinds of presser feet for special use in the accessory box. According to your sewing needs, it may be necessary to change presser foot.

### TO CHANGE THE PRESSER FOOT

1. Raise needle to its highest position.
2. Raise presser foot.
3. Loosen presser foot thumb screw and remove presser foot.
4. Place grooved side of the new presser foot against the flat of the presser bar.
5. Tighten thumb screw.


## Needle

### HOW TO CHANGE THE NEEDLE

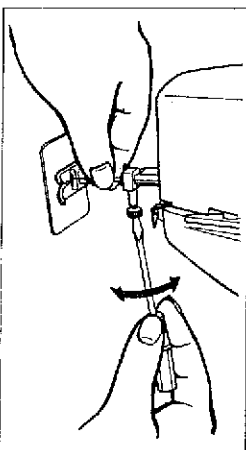

1. Raise needle to its highest position.
2. Loosen needle clamp screw and remove old needle.
3. Insert new needle up into needle clamp hole as far as it will go against the needle stop. Make sure the flat side of the needle faces toward the back and the long groove toward you.
4. Tighten needle clamp screw securely.


### HOW TO CHECK THE NEEDLE

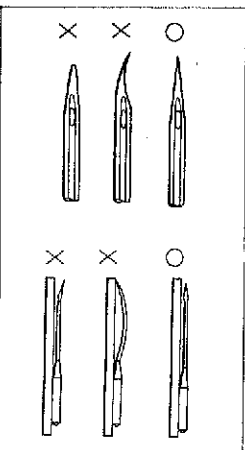

1. The sewing needle must always be straight and sharp for smooth sewing.
2. To check if needle is bent, place flat side of needle down as shown in illustration at left.

## Twin Needle

Your sewing machine is specially constructed for optional twin needle sewing. You can use either one or two colors of upper thread.

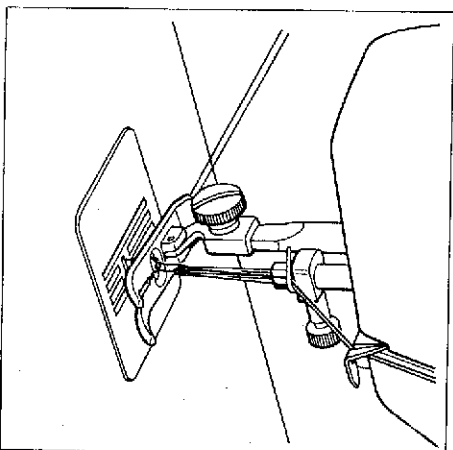

Make sure that the two threads used to thread twin needle are of the same weight. If thread is not of the same weight, stitching will be faulty.

### INSERTION OF TWIN NEEDLE

Insert in same manner as single needle. Flat side of needle should face toward back and long groove should face you.

### TREADING OF TWIN NEEDLE

Follow instructions for single needle threading (see page 12), but thread each needle separately. The groove should face you.

### NOTE FOR TWIN NEEDLE SEWING

1. Use ZIGZAG NEEDLE PLATE.
2. Use ZIGZAG PRESSER FOOT.
3. Set stitch width dial at under "3".


## Golden Stretch Stitch Needle

Because the popularity of stretch fabrics continues to grow, a special "GOLDEN STRETCH STITCH NEEDLE" has been developed. A package is enclosed in the accessory box of your sewing machine.

With the "GOLDEN STRETCH STITCH NEEDLE" you can sew any type of stretch fabric easily.

You will find that when using the "GOLDEN STRETCH STITCH NEEDLE" you will not skip stitches and your sewing will be neat and professional even on the most advanced stretch fabrics of today.

## Needle Plate

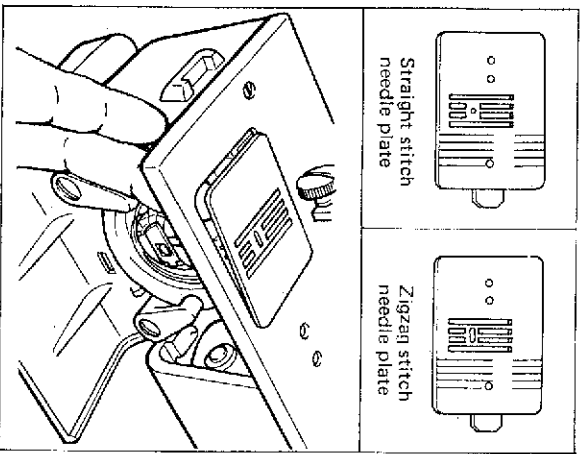

The needle plate with wide opening for needle should be used for zigzag and straight stitch.

The needle plate with small opening for needle should be used when sewing elastic or light types of material. Use of straight stitch is recommended. The straight stitch presser foot should be used as well.

To change needle plate;

1. Raise needle to its highest position.
2. Raise presser foot.
3. Open shuttle cover.
4. With your forefinger push needle plate upward from beneath.
5. Remove the old plate and place the new one so that the guide projection fits to the groove of the free-arm.
6. Press needle plate down in proper position.
7. Close shuttle cover.

Also, it is recommended that you use the guide lines on the needle plate to keep the seam straight.

For example, when you wish to sew 3/8 inch from the edge, place the edge of material on the line 3/8.


## Relative Chart of Sewing Material, Needle and Thread

SEWING MATERIALS	NEEDLE SIZES	THREAD SIZES
VERY THIN Fine tricot, Fine lace, Thin linen, Silk, Tulle, Chiffon	9	Cotton: 80-120 Synthetic Fine Mercerized Cotton
LIGHTWEIGHT Organdy, Jersey, Voile, Tartan, Synthetics, Silk, Batiste	11	Cotton: 60-80 Silk: "A" Synthetic Mercerized 50
MEDIUM Cotton, Gingham, Poplin, Percale, Pique, Satin, Vel- vet, Lightweight wool, Fine corduroy, Suitings	14	Cotton: 50-60 Silk: "A" Synthetic Mercerized 50-60
HEAVY Denim, Gabardine, Tweed, Corduroy	16	Cotton: 40-50 Mercerized Heavy Duty
VERY HEAVY Canvas, Overcoating, Upholstery	18	Cotton: 30-40 Mercerized Heavy Duty

- NOTE: 1. Select correct size of needle and thread from above chart.  
2. Use the same size thread for upper and lower threads.


## Sew-Light

### SEW-LIGHT SWITCH KNOB (BUTTON)

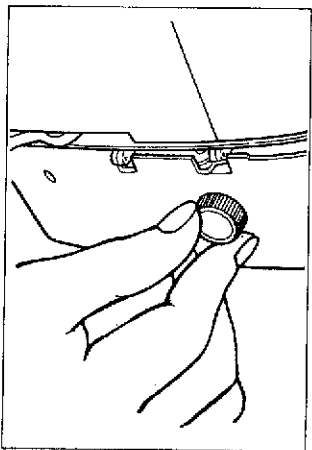

Turn this knob in any direction to switch light on and off. (110/115 V AREA)  
Push this button to switch light on and off. (220/240 V AREA)

### HOW TO CHANGE THE BULB

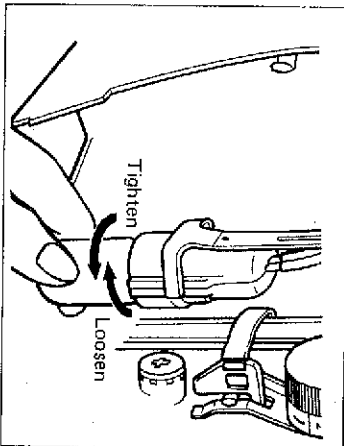


1. Swing open face plate.
2. Remove bulb by turning counter-clockwise.
3. Replace bulb and swing face plate to close.

NOTE: 1) Disconnect electric plug from wall outlet before removing bulb.

2) Always use CORRECT SPARE BULB.

MAXIMUM INPUT OF LAMP  
12 W ..... 110/115 V AREA  
15 W ..... 220/240 V AREA

## Extension Table


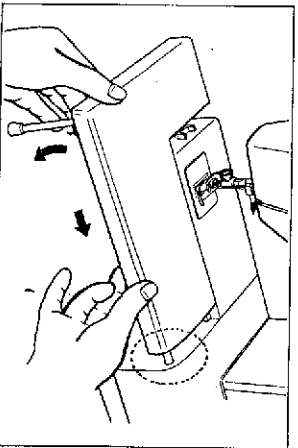


This sewing machine has an extension table which converts it into a flat-bed machine.

How to insert the extension table:

1. Stand the supporting leg securely and slide the extension table to the right as shown in illustration.
2. To remove extension table, just pull it to the left.

## Upper (Needle) Thread

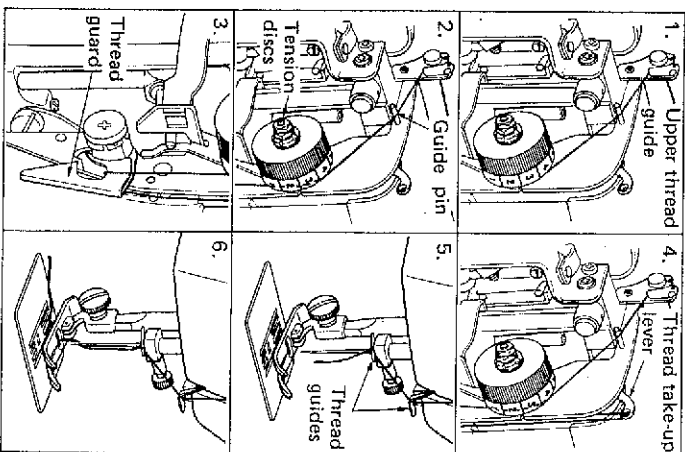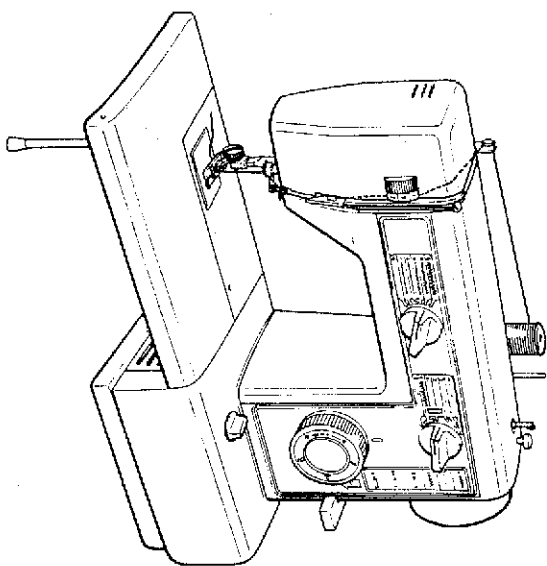

Before threading, raise presser foot and take-up lever to the highest position.

Then place spool of thread on the spool pin.



1. Pass thread through the eye of upper thread guide.
2. Pass thread between upper thread tension discs from the upper side of guide pin.
3. Bring thread down and up through thread guard from left to right so that thread picks up the thread check spring.
4. Pass thread into the eyelet of the thread take-up lever from left to right.
5. Bring down again and pass thread through the thread guides.
6. Thread needle from front to back and draw the thread out about 2 inches (5 cm).

NOTE:


IF THE THREADING ORDER IS NOT CORRECT, THREAD BREAKAGE, STITCH SKIPPING, WRINKLING OF FABRIC WILL OCCUR.

## Lower (Bobbin) Thread


### HOW TO WIND BOBBIN

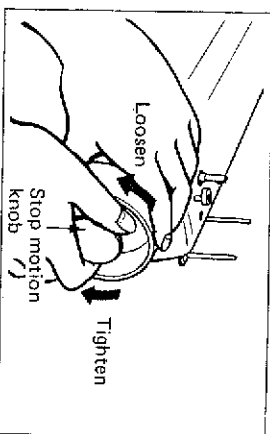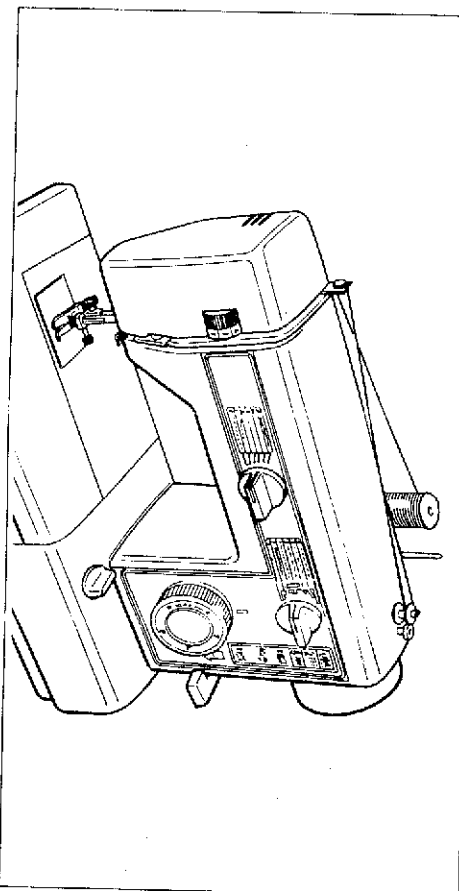


1. Loosen stop motion knob by turning it toward you.

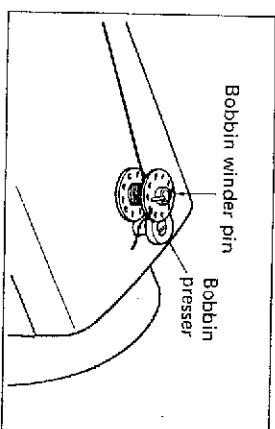

2. Place an empty bobbin on the bobbin winder pin.

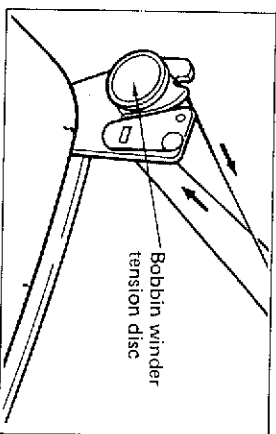


3. Place thread spool on the spool pin and take thread through bobbin winder tension disc.

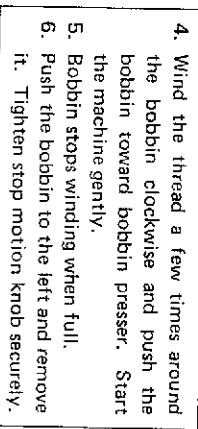

4. Wind the thread a few times around the bobbin clockwise and push the bobbin toward bobbin presser. Start the machine gently.
5. Bobbin stops winding when full.
6. Push the bobbin to the left and remove it. Tighten stop motion knob securely.



**HOW TO REMOVE AND INSERT BOBBIN CASE**

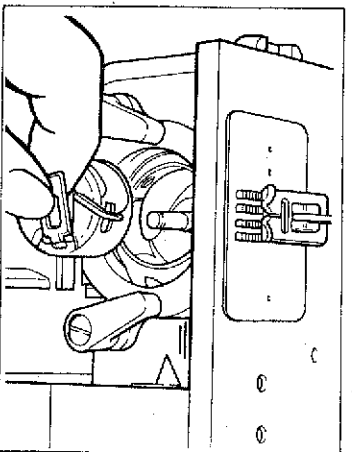


- TO REMOVE BOBBIN CASE**
1. Raise needle to its highest position.
  2. Open the shuttle cover by turning it down.
  3. Pull and open the latch of bobbin case.
  4. Pull out bobbin case from the shuttle.
- TO INSERT BOBBIN CASE**
1. Raise needle to its highest position.
  2. Holding bobbin case latch with metal finger of case pointing up, fit it into the notch at the top of shuttle race.
  3. Push case back fully making sure the case is in the proper position and release the latch.

**NOTE:**


- (A) Four inches (10 cm) of thread should be drawn out and left out of case.
- (B) Latch of bobbin case should be open fully to prevent bobbin coming out of case.
- (C) If bobbin case is not placed back in machine properly it will come out from the shuttle immediately after starting to sew.

**HOW TO THREAD BOBBIN CASE**

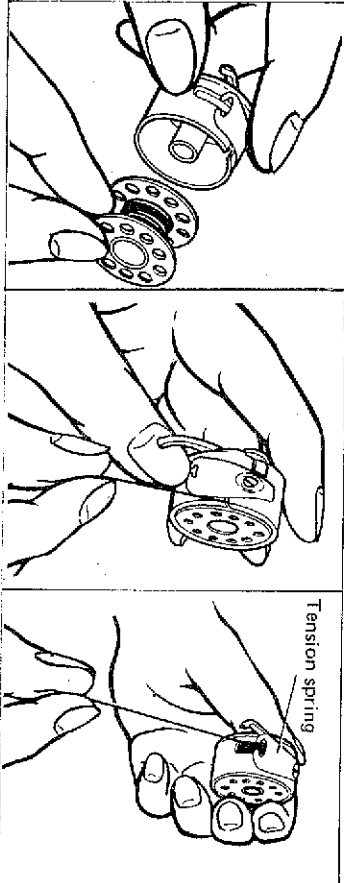

1. Unwind about 4 inches (10 cm) of thread from the bobbin. Insert wound bobbin into bobbin case.
2. Pull trailing thread into the slot of case.
3. Pull thread to the left under tension spring until thread enters into delivery eye.

**HOW TO PULL UP LOWER THREAD**

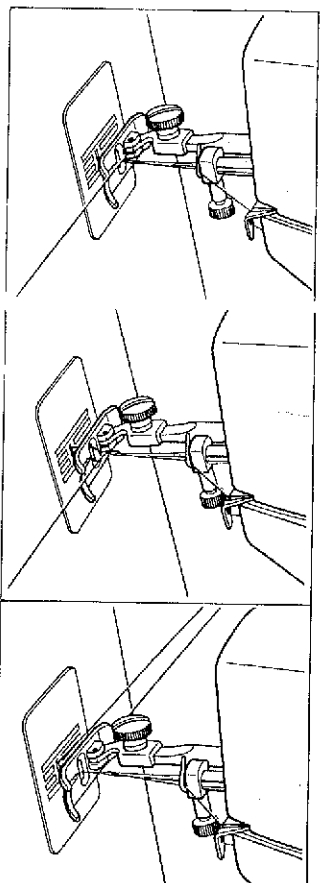


1. Raise needle and presser foot to the highest position. With left hand, hold the end of upper thread and with right hand, turn balance wheel toward you until the needle moves down and up again to its highest position.
2. Now upper thread catches the lower thread in a loop. Pull thread toward you so that lower thread will come up in a large loop from the presser foot.
3. Pull both threads under the toes of presser foot and place them to the rear leaving about 4 inches (10 cm).

## Thread Tension

It is important that tension of upper and lower threads be equal to prevent puckering of material or other problems. It is recommended that a test sample be made before starting to sew.

### UPPER THREAD TENSION

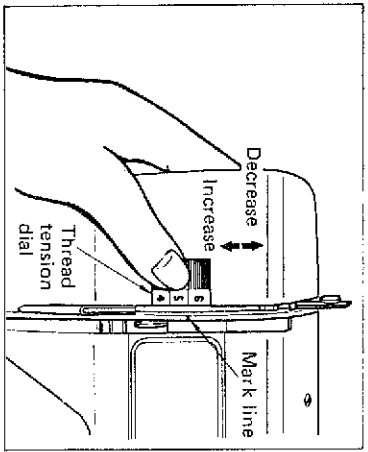

To regulate thread tension, merely turn thread tension dial with left thumb after lowering the presser foot.


**THE HIGHER THE NUMBER, THE TIGHTER THE TENSION.**

To increase tension: Turn dial downward to large number.

To decrease tension: Turn dial upward to smaller number.

**NOTE:** The zigzag stitch requires less upper thread tension than straight stitch.

### LOWER THREAD TENSION

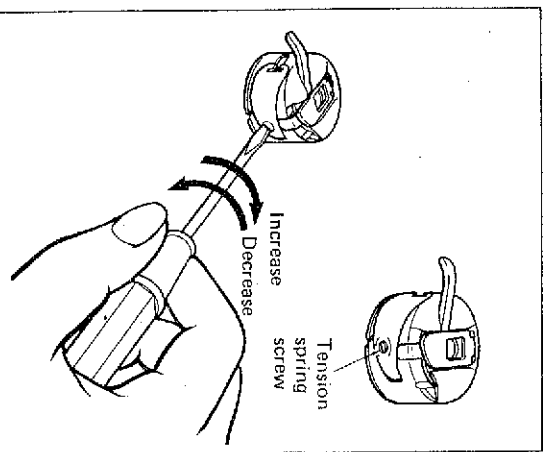


Although lower thread tension has already been adjusted at the factory, when sewing very thin or heavy material it may have to be readjusted.

To regulate the lower thread tension, turn small screw on the tension spring of the bobbin case with the small screw driver.

To increase tension: Turn the small screw clockwise very slightly.


To decrease tension: Turn the screw counter-clockwise very slightly.

### PERFECT STITCHING

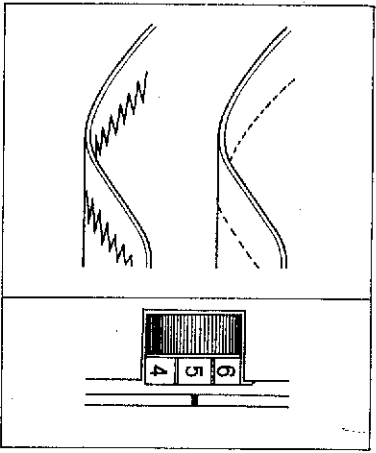

Tension of upper and lower threads should be equal, just sufficiently strong to lock both threads in material. Perfect stitching appears flat with no puckering of material.

### INCORRECT STITCH (A)

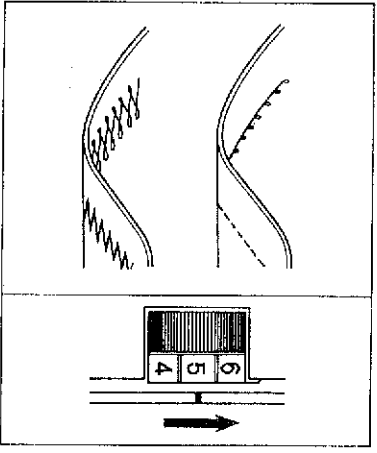


The upper thread lies on the surface of the material by pulling the lower thread up as shown.

This is caused by tight tension on the upper thread or loose tension on the lower thread. To correct this, turn the upper thread tension dial to a lower number.

When perfect stitch cannot be obtained by only upper thread tension dial, adjust the bobbin tension accordingly.

### INCORRECT STITCH (B)

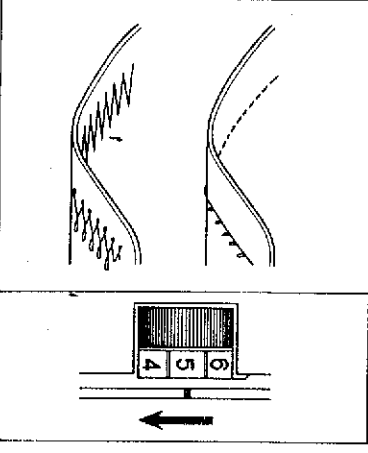

The lower thread lies on the under surface of the material by pulling upper thread down as shown.


This is caused by loose tension on the upper thread or tight tension on the lower thread. To correct this, turn the upper thread tension dial to a higher number.

If perfect stitching cannot be obtained by changing upper thread tension, adjust the bobbin tension.

**NOTE:** It is recommended that test samples are made before starting to sew.

## 2 Straight Stitching


PATTERN DIAL	:	1
STITCH LENGTH DIAL	:	1 ~ 4
STITCH WIDTH DIAL	:	0
PRESSER FOOT	:	Straight or Zigzag
NEEDLE PLATE	:	Straight or Zigzag
FEED DOG	:	Up
NEEDLE	:	Single

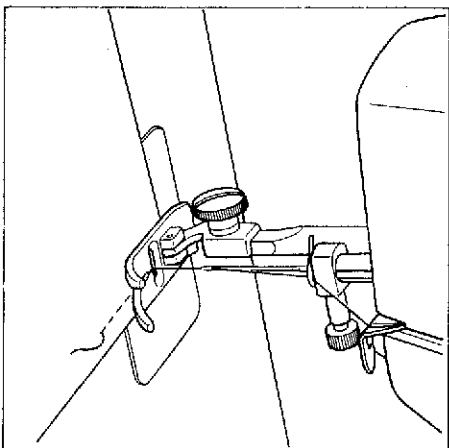

**NOTE:** Use straight stitch foot and needle plate when sewing light or elastic type materials with straight stitch.

### HOW TO START SEWING


1. Raise needle to its highest position and lift presser foot.
2. Place material under presser foot and position needle 3/8 inch (10 mm) from material edge.
3. Lower presser foot.
4. Pull up lower thread by turning the balance wheel toward you and place both upper and lower thread to the left.
5. For reverse sewing depress Reverse Sewing Lever as far as it will allow. Reverse sewing is used where reinforcement is needed.
6. Release Reverse Sewing Lever and start sewing in forward direction.

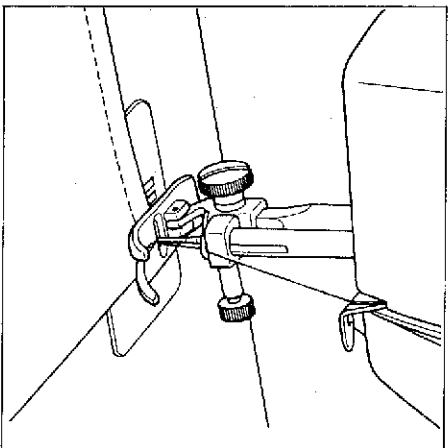

### HOW TO CHANGE SEWING DIRECTION


1. Stop machine at the turning point while the needle is in the material.
2. Raise the presser foot and turn the material to the new direction while the needle acts as the axis.
3. Lower the presser foot and start sewing in new direction.

**NOTE:** In case of twin needle sewing, raise the needle at the turning point.

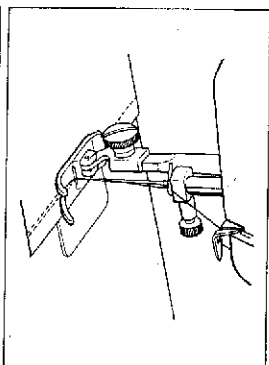


### HOW TO FINISH YOUR SEWING PROJECT (REVERSE STITCHING)

- Reverse stitching is used to reinforce stitches near the edge of material or wherever reinforcement is needed.
1. This is done by stitching to the edge of material ... then stopping.
  2. Depress Reverse Sewing Lever and stitch backwards for 3/8 inch (10 mm) from material edge.

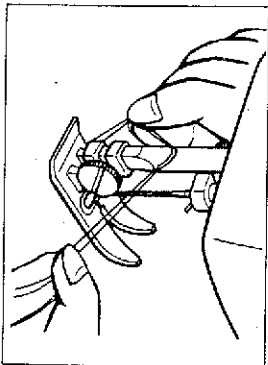

### HOW TO REMOVE FINAL SEWING FROM MACHINE

1. Stop the machine.
2. Raise needle to its highest position and make sure that the thread take-up lever is also in the highest position.
3. Lift presser foot and pull out the material gently to the left side diagonally.
4. Cut both threads on the thread cutter.
5. Leave about 4 inches (10 cm) of threads between toes of the presser foot to the rear while the thread take-up lever is at the highest position, and you are ready to sew again without any chance of thread pulling out of the needle.

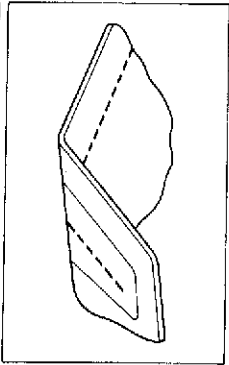

### HOW TO SEW VERY THIN MATERIAL



An underlayer of thin paper will help to eliminate skipped stitches and puckering on very thin material.

### HOW TO GUIDE YOUR MATERIAL

Do not pull the material. Let the machine do the work. Merely guide the material with your fingers in front of the presser foot as shown in the illustration.




If you pull the material, your needle might either bend or break.

However, in the case of special materials, such as tricot, crepes, knits, etc., we recommend that you support the material both in front and back of the presser foot with gentle tension as shown in the lower illustration.

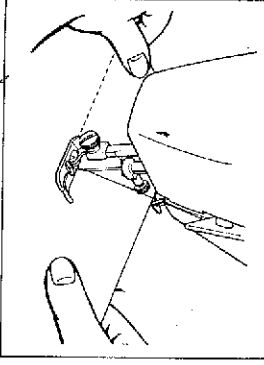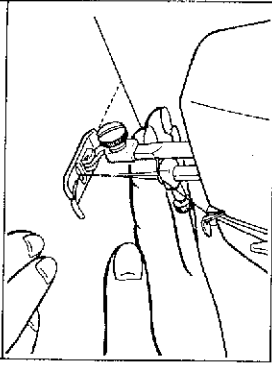

### 3 Zigzag Stitching

- PATTERN DIAL : 1
- STITCH LENGTH DIAL : 1~4 (For SATIN STITCH dial is set at F)
- STITCH WIDTH DIAL : 1~5 (Twin Needle sewing, always set at 3)
- PRESSER FOOT : Zigzag
- NEEDLE PLATE : Zigzag
- FEED DOG : Up
- NEEDLE : Single or Twin Needle

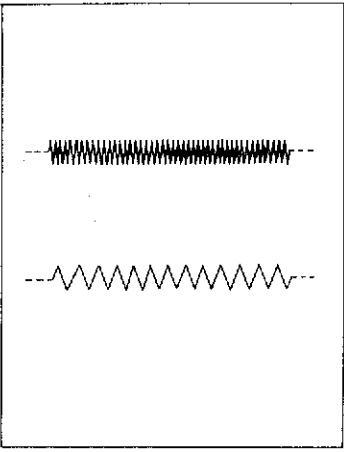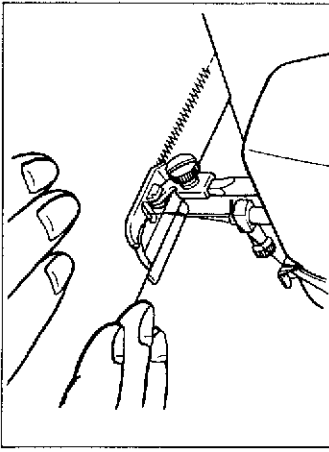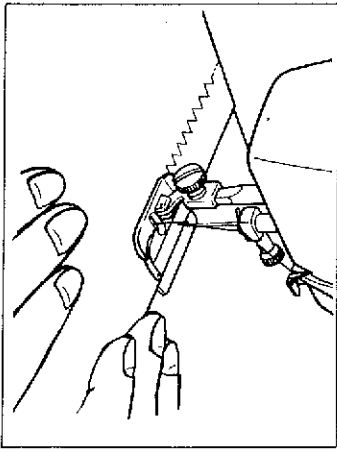

#### SIMPLE ZIGZAG STITCH

- Set Stitch Length Dial between 1-4 for simple zigzag stitch.
1. With Stitch Length Dial at "F" position sew 5-6 straight stitches for reinforcement.
  2. Set Stitch Width Dial to your desired width and commence sewing.
  3. Reset Stitch Width Dial to "O" and set Stitch Length Dial at "F" position to again reinforce stitches before removing work from machine.

NOTE: Zigzag stitching requires less upper thread tension than straight stitching.


#### SATIN STITCH

When Stitch Length Dial is set at "F" it produces the "SATIN STITCH" which is used for making fine buttonholes or decorative stitches.

NOTE: It is recommended that a test sample be made before starting to sew.

### 4 Decorative Stitches

- PATTERN DIAL : 1
- STITCH LENGTH DIAL : For SATIN STITCH set dial at F
- STITCH WIDTH DIAL : See Instruction Below
- PRESSER FOOT : Zigzag
- NEEDLE PLATE : Zigzag
- FEED DOG : Up
- NEEDLE : Single or Twin Needle

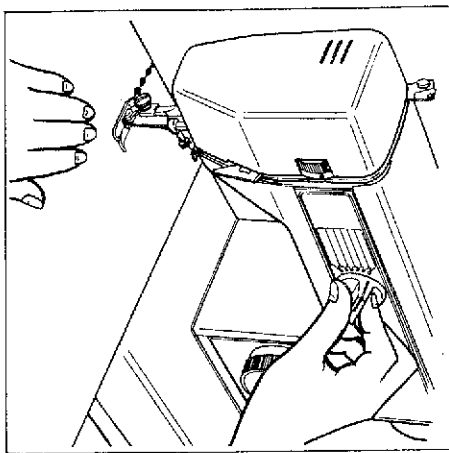


By using the "SATIN STITCH" as in the following instructions various decorative stitches can be obtained.

NOTE: Set stitch Width Dial at under "3" when using twin needle.



Needle	Patterns to be sewn	How to move Stitch Width Dial
Single needle		At even speed from 0 to 5 (3) and from 5 (3) to 0. Repeat this.
Twin needle		Almost the same manner as above but make round patterns.
Single needle		
Twin needle		
Single needle		Slowly from 0 to 5 (3) and quickly back to 0. Repeat the movement.
Twin needle		

NOTE: Number in brackets represents twin needle sewing.

- PATTERN DIAL : 3 (Blind Stitch)
- STITCH LENGTH DIAL : 1 ~ 2
- STITCH WIDTH DIAL : 3 ~ 5
- PRESSER FOOT : Zigzag
- NEEDLE PLATE : Zigzag
- FEED DOG : Up
- NEEDLE : Single

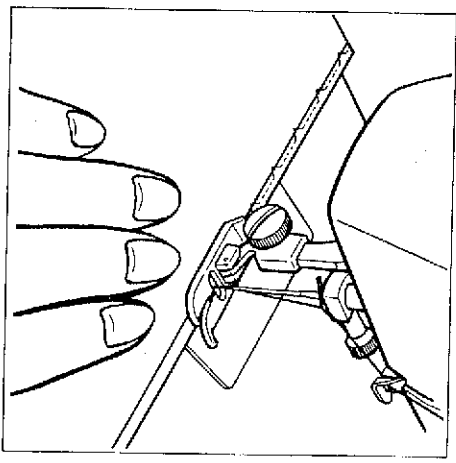


- BLIND STITCH**
1. Thread used should be the same color as material used.
  2. Fold material to size of hem desired and then fold back as shown in Figure A leaving 1/5 inch (5 mm) overlap at edge.
  3. Sew on fold as in Figure B.
  4. When material is unfolded you will have a blind stitched hem as in Figure C.

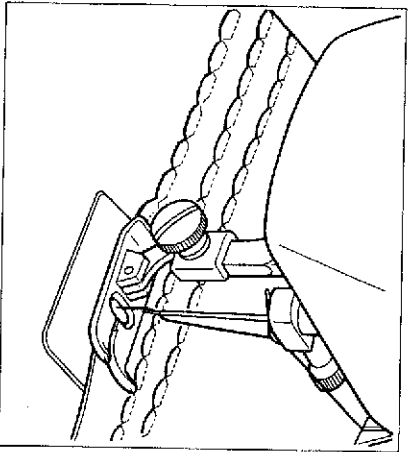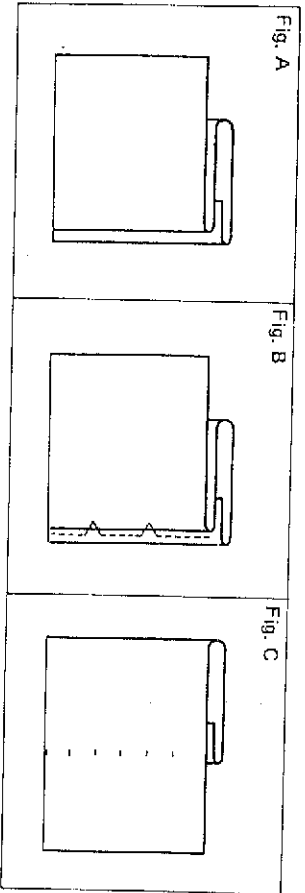

- SHELL STITCH**
- This stitch can be used for sewing a picotted edge on a light material.
1. Set machine at blind stitch with Stitch Width Dial set at "5".
  2. Sew material on bias, placing material under the presser foot so that straight stitches are sewn on seam line and zigzag stitches are sewn slightly over seam edge.
  3. This work requires a little tighter upper thread tension than normal.
  4. Sew at slow speed.
  5. Edge of material will be picotted.

**Triple Stretch Stitch**

- PATTERN DIAL : 2 (Triple Stretch Stitch)
- STITCH LENGTH DIAL : 4
- STITCH WIDTH DIAL : 0
- PRESSER FOOT : Zigzag or Straight
- NEEDLE PLATE : Zigzag or Straight
- FEED DOG : Up
- NEEDLE : Single (See Note 1)

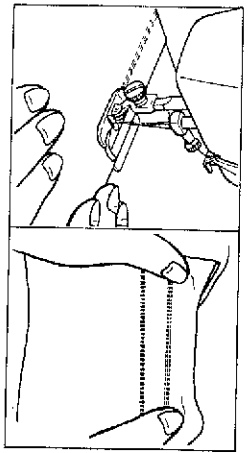


- The "Triple Stretch Stitch" is used for any stretch material such as knitted fabric, tricot, etc.
- This stitch is three times the strength of a regular stitch and gives elasticity to seams which prevents thread breakage.
- NOTE:**
1. Use of "Golden Stretch Stitch Needle" is recommended.
  2. When sewing extremely light or elastic material use straight stitch presser foot and needle plate.

# 6 Buttonholes and Button Sewing

## Buttonholes

- PATTERN DIAL : A, B, C, D.
- STITCH LENGTH DIAL : F (Fine) ~ 3 (Coarse)
- STITCH WIDTH DIAL : See Instruction Below
- PRESSER FOOT : Buttonhole Foot
- NEEDLE PLATE : Zigzag
- FEED DOG : See Instruction Below
- NEEDLE : Single

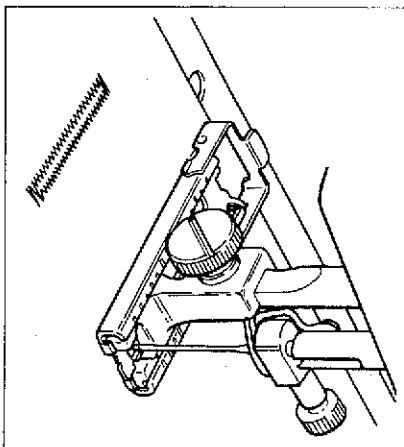


### PREPARATION FOR MAKING BUTTON-HOLE

1. Use buttonhole foot with sliding portion.
2. Choose the best stitch width (width of bar tack) between 3 to 5 to suit your work.
3. Using tailor's chalk, mark the length of buttonhole you require on the material.
4. Attach the buttonhole foot and push the sliding portion toward rear until it stops.
5. Place the material under the presser foot so that front end of bar tack can be sewn first.

NOTE: We suggest you to make a test sample before actual sewing.


### PROCEDURE OF MAKING BUTTONHOLE

Step	Sewing portion	Position of pattern dial	How to sew
Step A (Front end of bar tack)			<ol style="list-style-type: none"> <li>1. Set pattern dial at A.</li> <li>2. Lower presser foot and sew 5 to 6 stitches.</li> <li>3. Stop machine and raise needle from the material.</li> </ol>
Step B (Left side row)			<ol style="list-style-type: none"> <li>1. Turn the dial to the right and set at B.</li> <li>2. Sew predetermined length.</li> <li>3. Stop machine and raise the needle.</li> </ol>
Step C (Back end of bar tack)			<ol style="list-style-type: none"> <li>1. Turn the dial to the left and set at C (same position as A).</li> <li>2. Sew 5 to 6 stitches.</li> <li>3. Stop machine and raise the needle.</li> </ol>
Step D (Right side row)			<ol style="list-style-type: none"> <li>1. Set the dial at D.</li> <li>2. Sew the right side row until the needle reaches position D.</li> </ol>

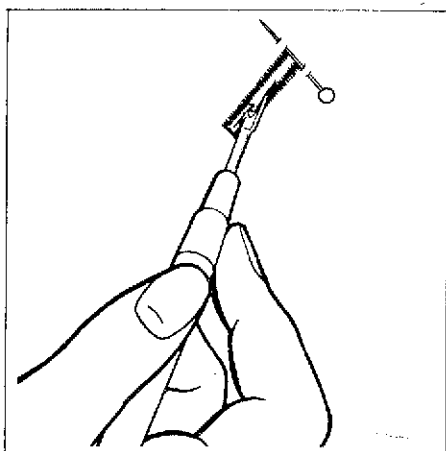

### HOW TO SECURE STITCHING AND CUT MATERIAL FOR BUTTONHOLE.

1. To secure stitching, turn the material 90 degrees counter-clockwise and sew 5-6 straight stitches.
2. Remove from machine. Cut opening in buttonhole with seam ripper tool, taking care not to cut through any stitching.
3. It is recommended that pins are placed across both ends of buttonhole as protection against cutting bar tack stitching.

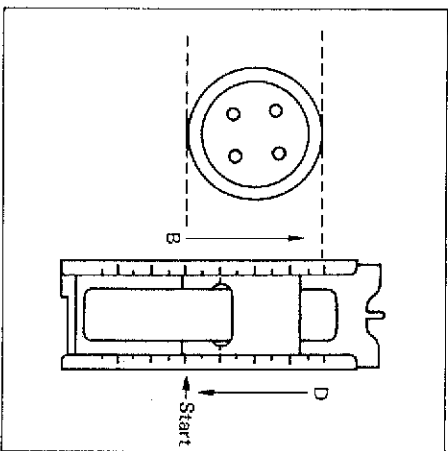


### MAKING SEVERAL BUTTONHOLES OF THE EXACT SAME SIZE

1. Set the sliding portion of the buttonhole foot according to the size of the button and sew Step A.
2. Sew Step B until the sliding portion no longer moves.
3. Sew Step C.
4. Sew Step D until the sliding portion returns to Step A.
5. Repeat 1 through 4 for each additional buttonhole of the same size, using the same starting point.


# 7 Attachments

## Narrow Hemming

By using narrow hemmer foot a neat scroll type hem is made.

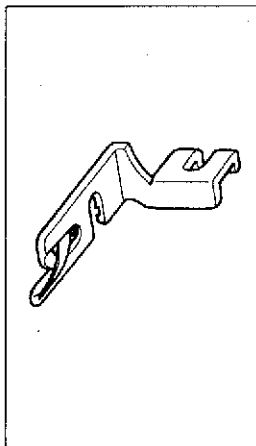


- PATTERN DIAL : 1
- STITCH LENGTH DIAL : 2-3
- STITCH WIDTH DIAL : 0 (3)
- PRESSER FOOT : Narrow-hemmer Foot
- NEEDLE PLATE : Straight or Zigzag
- FEED DOG : Up
- NEEDLE : Single

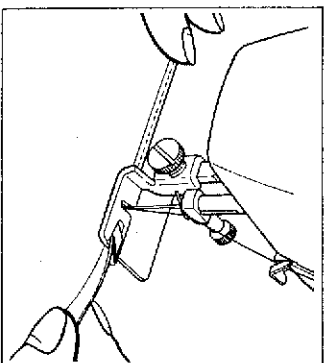


1. Cut top corner of the material about 1/8 inch (3 mm).
2. Place material wrong side up and insert cut off angle into foot opening.
3. Pull material by hand from the back of the presser foot.  
Make sure the needle is positioned over material.  
Lower presser foot.
4. Make sure upper and lower threads are placed behind presser foot.
5. Sew at medium speed, guiding the material by hand, through the presser foot opening.

NOTE: With stitch width dial set at 3, zigzag narrow hemming can be done following the above procedure.

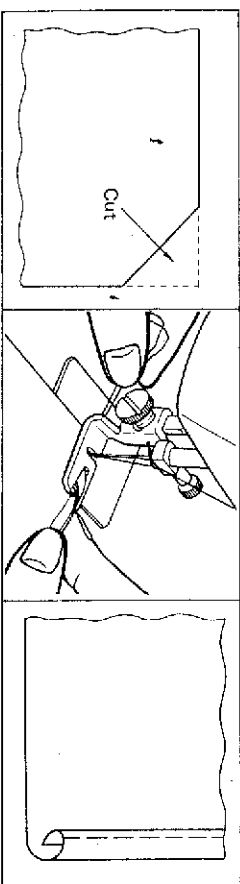

## Button Sewing

- PATTERN DIAL : 1
- STITCH LENGTH DIAL : Set at any position.
- STITCH WIDTH DIAL : This dial is used to control distance between holes in button.
- PRESSER FOOT : Button Sewing Foot
- NEEDLE PLATE : Zigzag
- FEED DOG : Down
- NEEDLE : Single

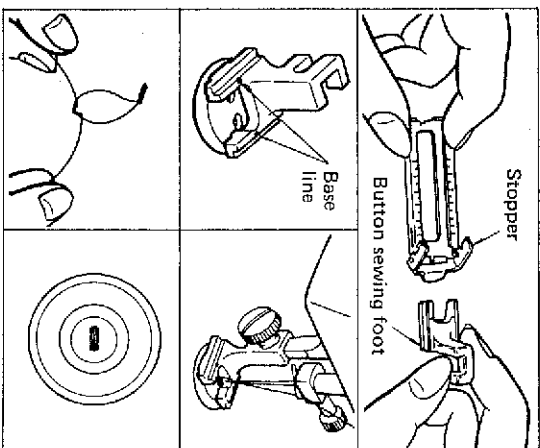


1. Removing the sliding portion of button-hole foot, you will have a button sewing foot.  
To remove the sliding portion, push the stopper down and slide the button sewing foot backward.
2. Place button between the presser foot and the material, making sure that holes of button fall in line with the base line of button sewing foot.
3. Set stitch width control to regulate distance of stitch between the holes in the button. Lower presser foot and check to see that needle enters holes in button properly.
4. At slow speed sew approximately 10 stitches.
5. Remove from machine. Cut upper and lower threads and with normal sewing needle sew threads through to back of button and tie.


## BUTTON FITTING WITH THREAD SHANK

For heavier material use the following method to sew on buttons:

1. Place a needle on the button as shown in illustration and then sew on button as you would regularly (see above).
2. When removing work from machine leave a long upper thread to be used to form a thread shank.
3. Pull the upper thread through hole of button, between button and material, to form thread shank. Wind this thread around stitching which will make button very secure.
4. With normal sewing needle sew in thread ends.

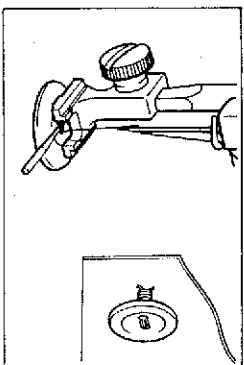


## Zipper Insertion

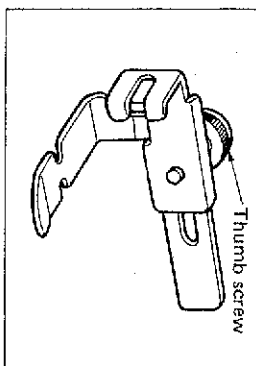

Zipper foot is used to sew various types of zippers and can easily be positioned to right or left side of needle. When zipper is being sewn at right side of needle, position zipper foot by loosening thumb screw and sliding zipper foot to the left.

When the zipper is being sewn at left side of needle, position zipper foot by loosening thumb screw and sliding zipper foot to the right.


PATTERN DIAL	:	1
STITCH LENGTH DIAL	:	2-3
STITCH WIDTH DIAL	:	0
PRESSER FOOT	:	Zipper Foot
NEEDLE PLATE	:	Straight
FEED DOG	:	Up
NEEDLE	:	Single

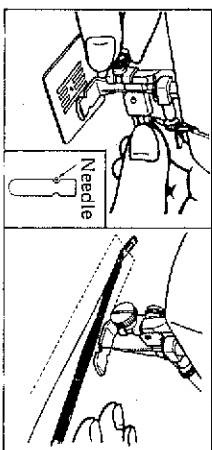

1. Lower needle into side notch located on presser foot (right or left).
2. Tighten thumb screw to lock presser foot into position.
3. Fold edge of material 3/4 inch (2 cm.) and place zipper under folded portion.
4. By guiding zipper foot along the zipper teeth you will stitch close to edge of zipper in correct position.
5. To sew opposite side of zipper loosen thumb screw and position zipper foot (right or left).


## Darning

PATTERN DIAL	:	1
STITCH LENGTH DIAL	:	Set at any position
STITCH WIDTH DIAL	:	0
PRESSER FOOT	:	Darning Foot
NEEDLE PLATE	:	Straight
FEED DOG	:	Down
NEEDLE	:	Single

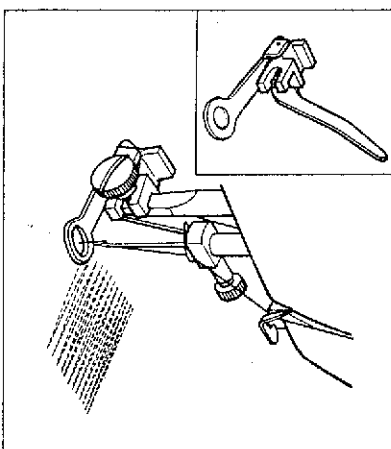

1. Place material with area to be darned under presser foot.
2. Lower presser foot.
3. Stitch by slowly drawing material back and forth.
4. Repeat until area to be darned is completely filled in.

## Cloth Guide

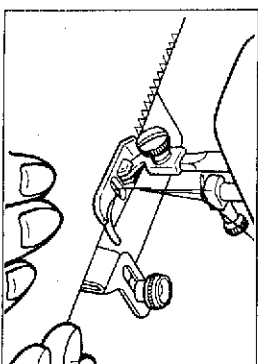

Using cloth guide will help to sew parallel and straight at edge of material.

Attach cloth guide by placing it over the two holes on the right side of needle plate in sewing machine bed.


Put thumb screw through guide slot, adjust to desired distance and secure by turning thumb screw.



# 8 Various Other Stitches

## Gathering


PATTERN DIAL	: 1
STITCH LENGTH DIAL	: 4
STITCH WIDTH DIAL	: 0
PRESSER FOOT	: Straight
NEEDLE PLATE	: Straight
FEED DOG	: Up
NEEDLE	: Single

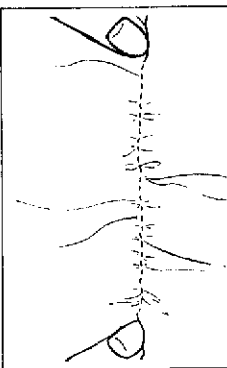

1. Loosen upper thread tension (set dial at about '2') so that lower thread lies on the under side of material.
2. Sew a single row or multiple rows of straight stitching.
3. Pull lower thread(s) to gather up material.

## Attaching Lace


PATTERN DIAL	: 1
STITCH LENGTH DIAL	: 2-4
STITCH WIDTH DIAL	: 0
PRESSER FOOT	: Zigzag
NEEDLE PLATE	: Zigzag
FEED DOG	: Up
NEEDLE	: Single

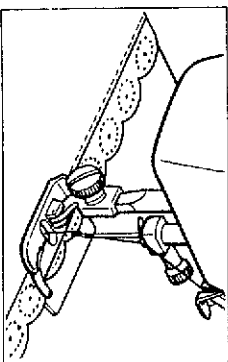

1. Place lace under material letting it overlap edge 1/4 inch (5 mm).
  2. Place under presser foot and sew.
- NOTE: If satin stitch or a decorative stitch is used to sew lace, it will be most decorative.

## Appliqueing


PATTERN DIAL	: 1
STITCH LENGTH DIAL	: F-2
STITCH WIDTH DIAL	: 1-3
PRESSER FOOT	: Zigzag
NEEDLE PLATE	: Zigzag
FEED DOG	: Up
NEEDLE	: Single

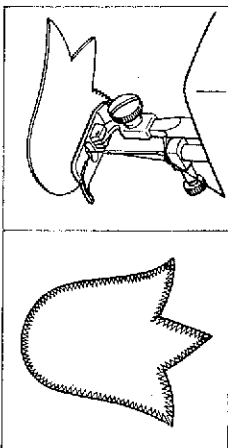

1. Baste cut design to the material.
  2. Sew carefully following design.
  3. Cut away surplus material outside of stitching.
  4. Remove basting.
- NOTE: Reinforce with straight stitch when you start and finish.

## Cording

PATTERN DIAL	: 1
STITCH LENGTH DIAL	: F-2
STITCH WIDTH DIAL	: In accordance with thickness of cord being used, set stitch width.
PRESSER FOOT	: Zigzag
NEEDLE PLATE	: Zigzag
FEED DOG	: Up
NEEDLE	: Single

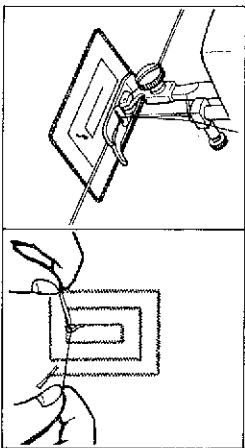

1. Set Stitch Width Dial.
2. Place cord on fabric to be sewn.
3. Lower presser foot making sure cord is centered and sew using zigzag stitch. Guide cord by hand to where you desire it.

## 9 Maintenance and Care of Your Machine


### Cleaning

The sliding parts of the shuttle race should be cleaned regularly so that lint does not accumulate.

#### HOW TO REMOVE THE SHUTTLE HOOK


1. Raise needle to its highest position.
2. Open shuttle cover.
3. Take out bobbin case.
4. Push latch levers outside and remove retaining ring.
5. Remove hook by grasping center post of hook.

NOTE: When needle is lowered shuttle hook cannot be removed.

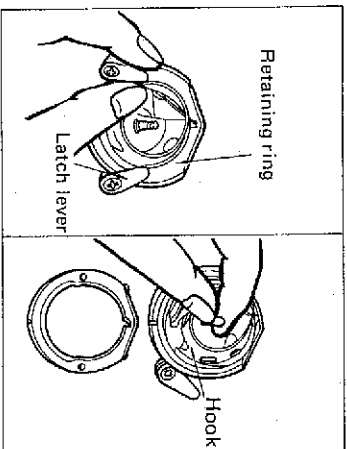


#### CLEANING SHUTTLE RACE

1. Remove accumulated lint and thread from the retaining ring, hook, driver and race body with brush.
2. A cloth dampened with machine oil should be used to wipe shuttle race clean.
3. Clean shuttle hook in same manner as above.
4. Reassemble.

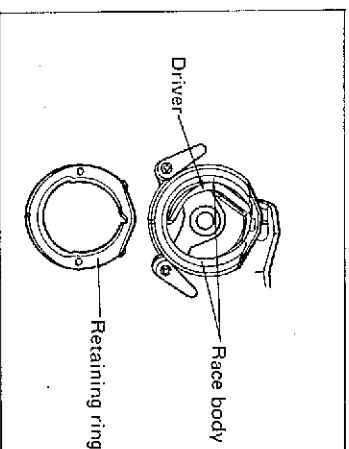


#### CLEANING FEED DOG

1. Take out needle plate.
2. Clean upper part of feed dog and shuttle race body with brush.

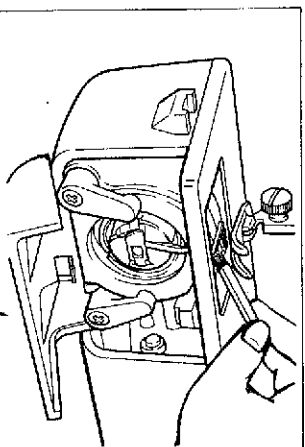

### Monogramming and Embroidering, Using Embroidery Hoop

PATTERN DIAL	: 1
STITCH LENGTH DIAL	: Set at any position.
STITCH WIDTH DIAL	: 0-5
PRESSER FOOT	: Removed
NEEDLE PLATE	: Zigzag
FEED DOG	: Down
NEEDLE	: Single

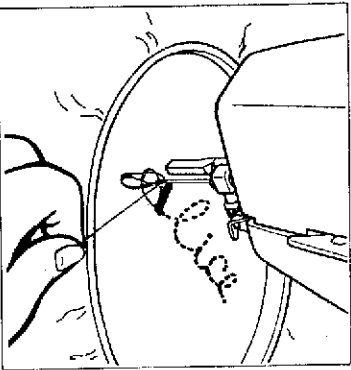

#### PREPARATION FOR MONOGRAMMING AND EMBROIDERING

1. Set your sewing machine as per above instructions.
2. Draw lettering (for monogramming) or design (for embroidering) on the right side of the material.
3. Stretch work between embroidery hoops as firmly as possible.
4. Place the work under the needle and lower presser bar.
5. Pull lower thread up through the work at starting position by turning balance wheel and make a few holding stitches.
6. Hold the hoop with thumb and forefingers of both hands while pressing the material with middle and third fingers and supporting the outside of hoop with smaller finger.

#### MONOGRAMMING


1. Sew, moving hoop slowly along the lettering at an even rate of speed.
2. Secure with a few straight stitches.

(NOTE: These instructions also apply to embroidering.)

#### EMBROIDERING

1. Stitch outline of design by moving embroidery hoop accordingly.
2. Fill in design stitch from outline of design to inside and from inside to edge of outline alternately until design is completely filled in. Keep stitching close together.

NOTE: A long stitch is made by moving embroidery hoop rapidly and a short stitch is made by moving it slowly.

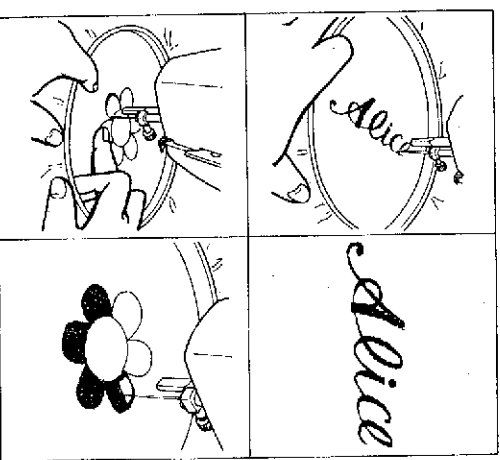


## How to Oil Sewing Machine


For smooth and silent operation the moving parts of the machine should be oiled periodically. (See diagram below.)

- OIL 1 to 2 DROPS TO THE POINTS MARKED →
- OIL 3 to 4 DROPS TO THE POINTS MARKED →
- OIL ONCE A WEEK IF MACHINE IS USED MORE THAN ONE HOUR PER DAY. IF MACHINE IS USED MORE OFTEN OIL EVERY DAY.

After the machine has been oiled, remove thread and with presser foot up, run machine fast. Then wipe up any excess oil.

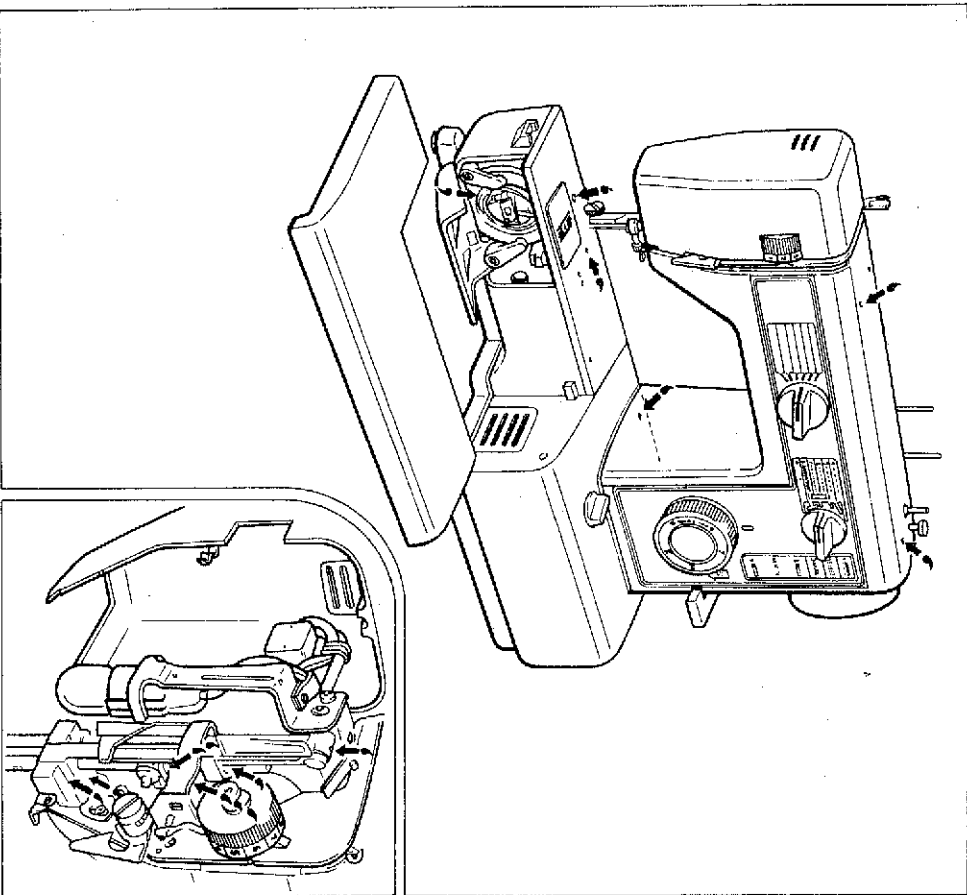

Occasionally, remove the top cover by loosening two screws on it and apply machine oil to oiling points as illustrated. Also, apply machine oil to inner parts of free-arm as illustrated by loosening two screws.

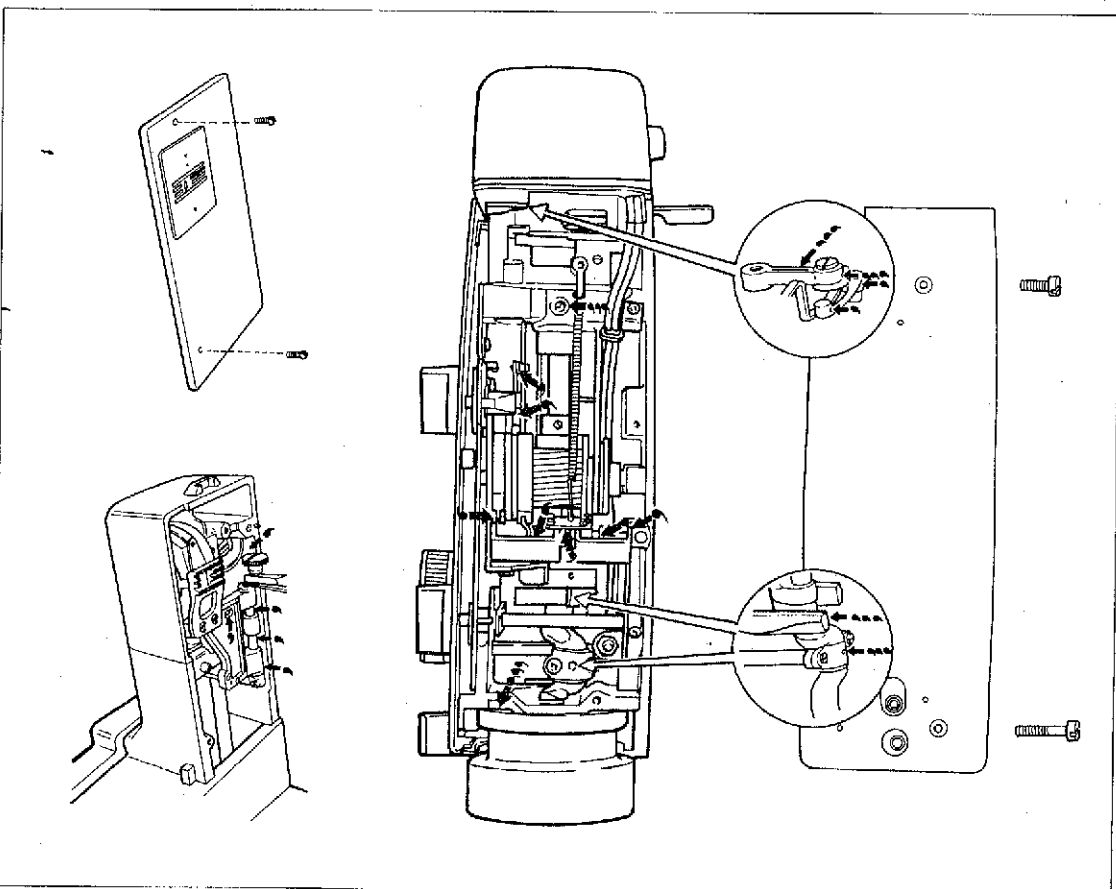

NOTE: If machine has not been used for a long period of time, oil tends to coagulate and operation of machine will not be smooth. Apply a few drops of oil to oiling points, and with presser foot up run machine for a few minutes. Then wipe up any excess oil.

## Check List for Better Sewing

Check this list if you are having the following problems:

### IF MATERIAL IS NOT FED

1. Feed dog is down.
2. Needle plate is out of position.
3. Stop motion knob is loose.
4. Stitch length regulator is at 0.

### IF UPPER THREAD BREAKS

1. Upper threading is not correct.
2. Needle eye is not smooth.
3. Upper thread is too large for needle eye.
4. Upper thread tension is too tight.
5. Needle is inserted incorrectly.

### IF NEEDLE BREAKS

1. Needle is inserted incorrectly.
2. Needle clamp screw is loose.
3. Bent needle is used.
4. Upper threading is not correct.
5. Upper thread tension is too tight.
6. Wrong needle and thread for cloth being sewn are used.
7. Material pulled excessively.

### IF LOWER THREAD BREAKS

1. Lower thread is entangled in shuttle.
2. Lower thread tension is too tight.
3. Lower threading is not correct.

### IF MACHINE SKIPS STITCHES

1. Needle is not sharp and straight.
2. Needle is inserted incorrectly.
3. Wrong needle and thread for cloth being sewn are used.
4. Upper threading is not correct.
5. Lint is clinging to under-side of needle plate.

### IF LOOPS FORM ON FABRIC

1. Tension of upper or lower thread is wrong.

### IF MATERIAL SHOULD PUCKER

1. Thread tension is too tight.
2. Threading is not correct.
3. Thread is caught by something.
4. Lower thread is unevenly wound on bobbin.

### IF MACHINE RUNS HEAVY OR NOISY

1. Machine is out of oil.
2. Lint is accumulated on shuttle and teeth of feed dog.

## Repacking the Machine

Keep this carton and packing material for future use in the event it becomes necessary to reship the sewing machine.  
(Improper packaging or improper packing material could result in damage during shipping.)  
Instructions for repacking the machine are illustrated below.

